

## 82 FLASH CODE 82

Section	Page
82.1 DESCRIPTION OF FLASH CODE 82 .....	82-3
82.2 SAE J1587 EQUIVALENT CODE FOR FLASH CODE 82 .....	82-3



## **82.1 DESCRIPTION OF FLASH CODE 82**

Flash Code 82 is used to identify oil level, crankcase pressure, dual fuel BOI, or exhaust temperature voltage low.

This code is not covered in this manual. If changes occur, notification will be sent from DDC.

## **82.2 SAE J1587 EQUIVALENT CODE FOR FLASH CODE 82**

The SAE J1587 equivalent code for flash code 82 is p 098 4, oil level sensor input voltage low; p 101 4, crankcase pressure sensor input voltage low, or s 020 4, dual fuel BOI input voltage low.

